

# Internal Driver T5 LED TUBE Manual

## ■ Matters needing attention

- Before installing the lighting fixtures, please read this instruction manual carefully.
- The lighting fixtures should be installed, connected and tested by a certified installer based on the local regulations.
- Lamps should always be installed or replaced with care.
- Please check local voltage in accordance with the product requirements before using the product.
- Relamping only can be done when the power is off and the lamp is completely cooled down.
- When a lamp is to be cleaned, make the power off and let it cool down completely. Clean the fixture with a soft cloth and a standard PH neutral detergent. Stainless steel finishing should be maintained regularly.
- Misuse of, or changes to the fixture shall nullify the guarantee.
- Don't cover the fixtures with flammable materials.
- Exclusively replaced by the manufacturer or his service agent or the similar qualified person in order to avoid a hazard.

## ■ Temperature Characteristics T-ambient 25°C

### Temperature

Operating -20~+40 °C  
Storage -40~+85 °C

### Humidity

Operating 10%-80%  
Storage 10%-80%

## ■ Electrical Characteristics


### Input Voltage:

US:AC100~277V 50/60Hz PF: ≥0.93  
EU:AC220~240V 50/60Hz PF: ≥0.95

Power Efficiency: ≥0.90



## 1.Product Dimension

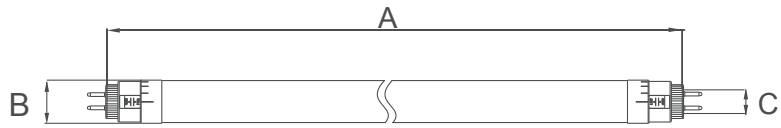

Model NO.	Size A(MM)	Size B(MM)	Size C(Base)
600MM	549	22	G5
900MM	849	22	G5
1200MM	1149	22	G5
1500MM	1449	22	G5

## 2.Installation



- NOTE: Before installation please make sure the power is turned off