
LED Industrial Line Luminaire Manual



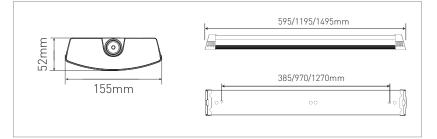








General Safety Information


- Installation, commissioning and maintenance only by qualified
- Never perform any work on the luminaire with voltage applied.


 Danger to life due to electric shock!
- Electric connection must be appropriate according to all applicable standards and other national and international safety and accident prevention regulations.
 Damaged luminaires must not be operated.
 Observe and retain safety instructions and mounting instructions.
- instructions
- No liability is accepted for damages resulting from improper
- Use genuine parts only for repair.

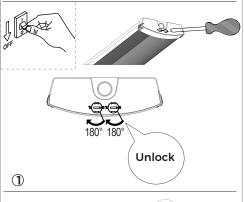


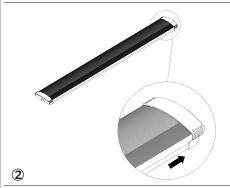


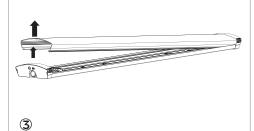


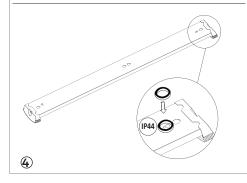


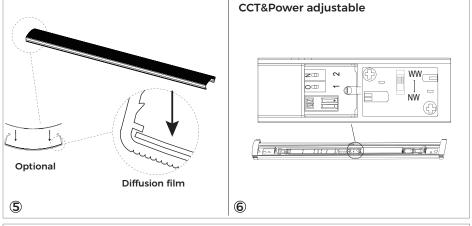


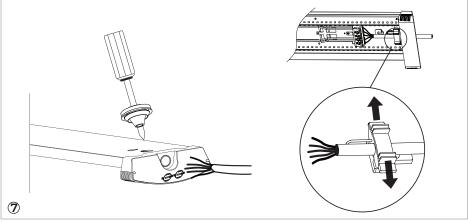


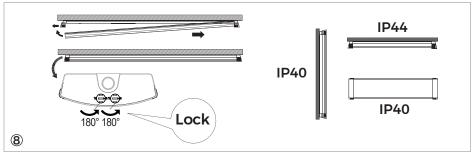

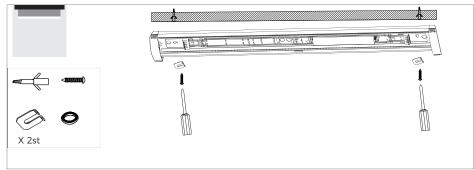


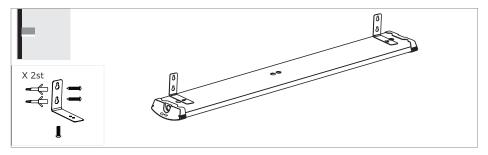

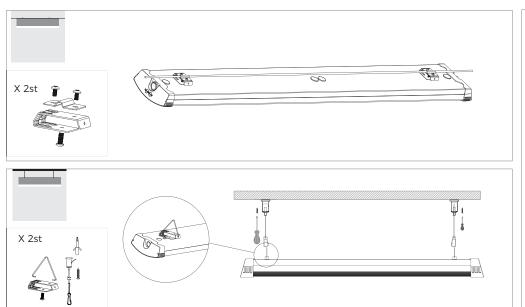

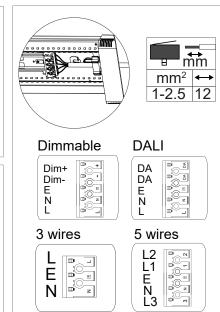

ССТ	EET
4000/5000K	В
3000/6500K	С

 

This product contains a light source of energy efficiency class .(4000K/5000K) This product contains a light source of energy efficiency class <C>.(3000K/6500K)





Replacement steps:

- A: Loosen the end cap and remove the diffuser;
- B: Screw out the fixing screws on PCB board and LED driver;
- C: Replace the LED module and driver with new one;
- D: Put back the diffuser and lock the end cap.

