
 
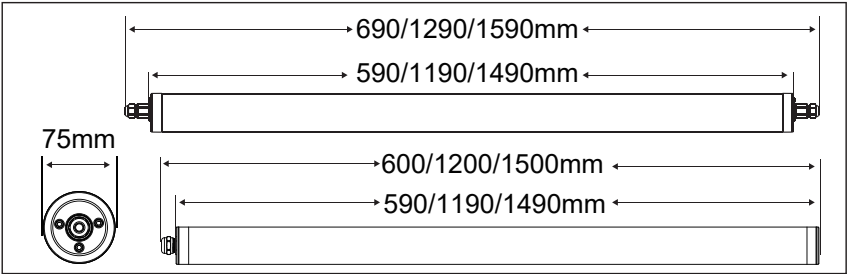

 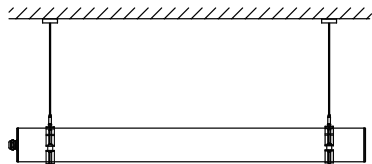
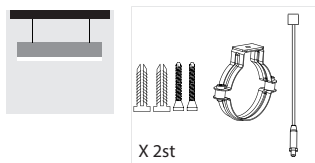
 
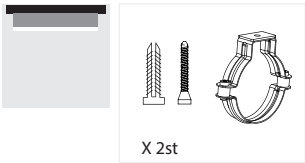


# Tubular LED Luminaire Manual




### General Safety Information


- Installation, commissioning and maintenance only by qualified electrician.
- Never perform any work on the luminaire with voltage applied. Danger to life due to electric shock!
- Electric connection must be appropriate according to all applicable standards and other national and international safety and accident prevention regulations.
- Damaged luminaires must not be operated.
- Observe and retain safety instructions and mounting instructions
- No liability is accepted for damages resulting from improper use.
- Use genuine parts only for repair.

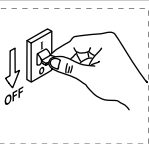

	mm
mm <sup>2</sup>	12
1-2.5	

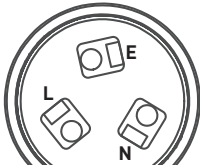


3 wires

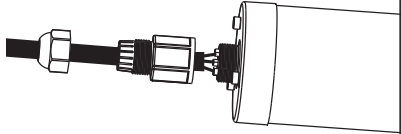


Quick fit connector




	mm
mm <sup>2</sup>	12
1-2.5	

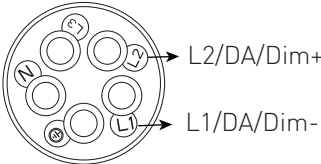


5 wires / DALI / Dimmable

 


Male&female connector

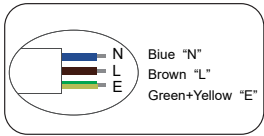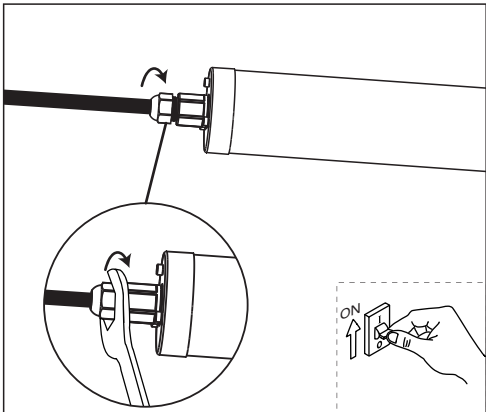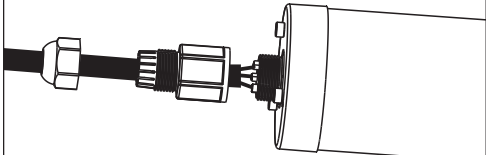

3 wires

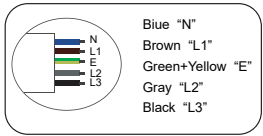

5 wires


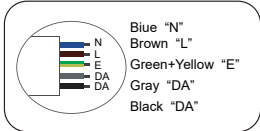


DALI



Dimmable

CCT	EET
4000/5000K	B
3000/6500K	C

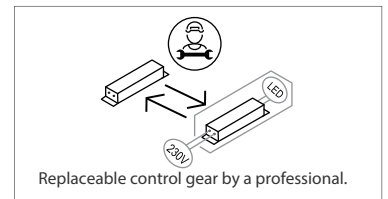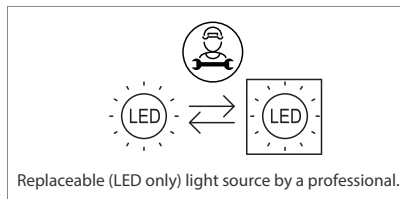

This product contains a light source of energy efficiency class <B>. (4000K/5000K)  
This product contains a light source of energy efficiency class <C>. (3000K/6500K)

## Replace method :

1. Open the endcap and take out the module.
2. Remove the cables and plastic clips connecting the PCB board or screws on the power supply.
3. Replace the PCB board or driver with new one.

