



# LED Tri-proof Luminaire Manual



 **IP65 IK08**



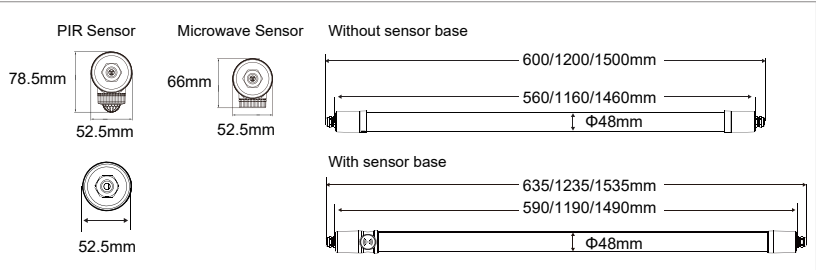


### General Safety Information


- Installation, commissioning and maintenance only by qualified electrician.
- Never perform any work on the luminaire with voltage applied. Danger to life due to electric shock!
- Electric connection must be appropriate according to all applicable standards and other national and international safety and accident prevention regulations.
- Damaged luminaires must not be operated.
- Observe and retain safety instructions and mounting instructions
- No liability is accepted for damages resulting from improper use.
- Use genuine parts only for repair.

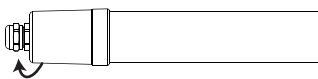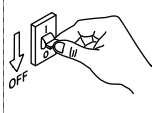


①

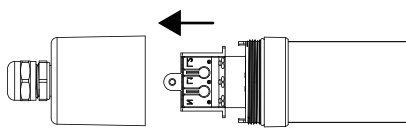


②

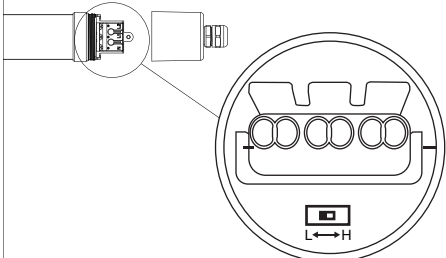


④ Power adjustable, multi-lumen options

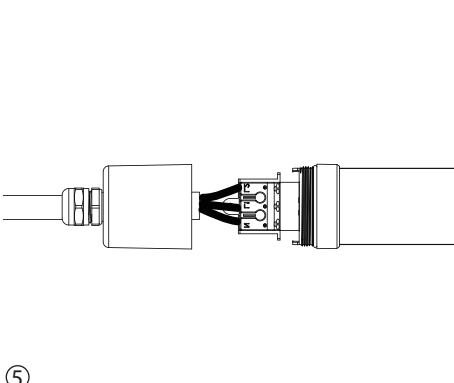


⑤

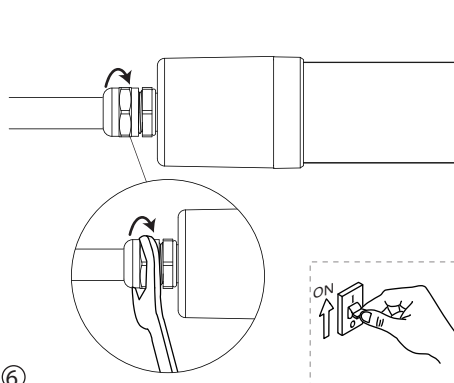


⑥

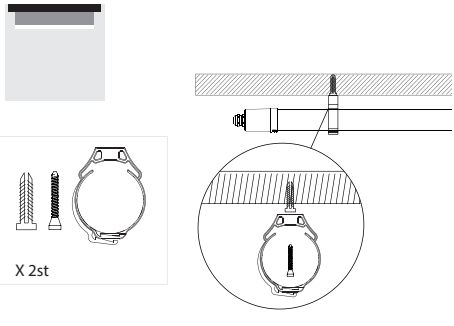


X 2st

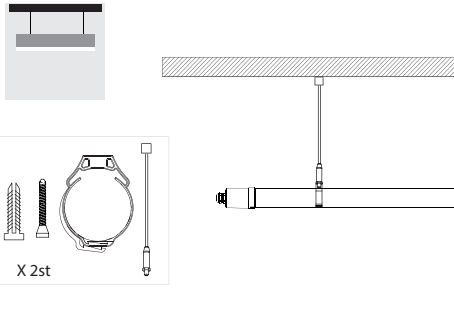


X 2st

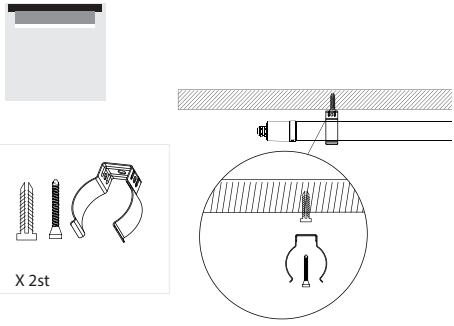


X 2st

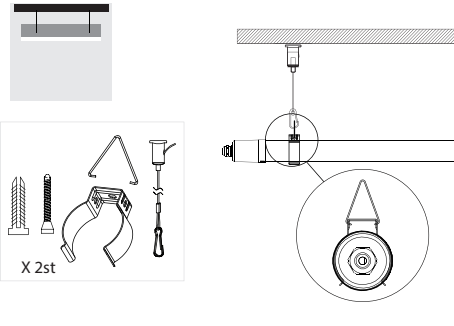


X 2st

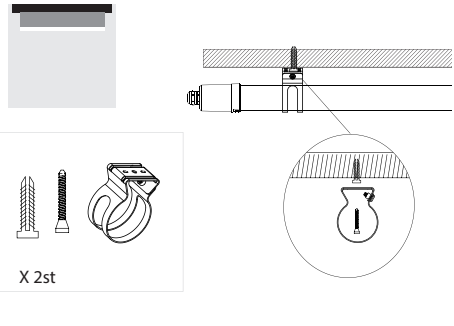

X 2st

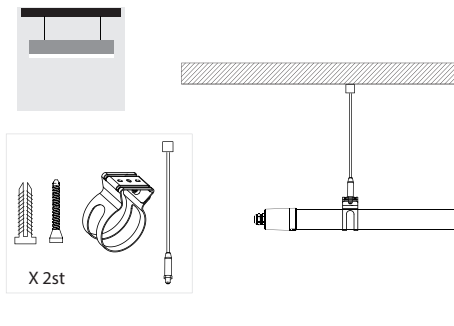

X 2st

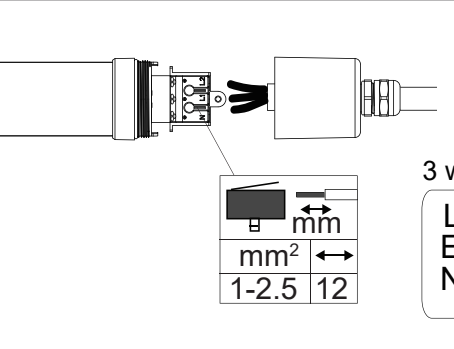


3 wires

5 wires


DALI

Linkable qty

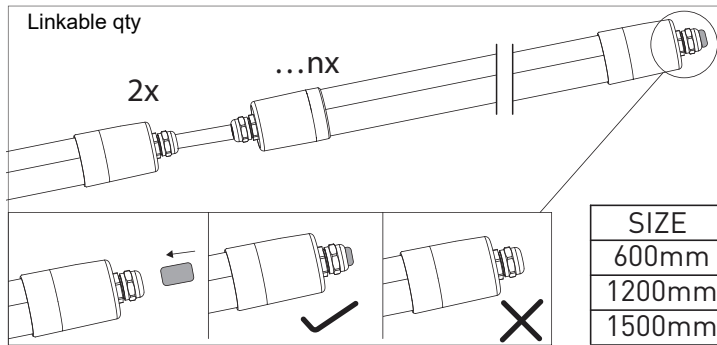


SIZE	INPUT	NX	NX
600mm	230vac	50(15W)	37(20W)
1200mm	230vac	34(22W)	25(30W)
1500mm	230vac	25(30W)	18(40W)

Circuit breakers

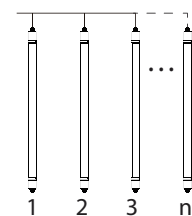


B10	B16	C10	C16
17	27	24	39


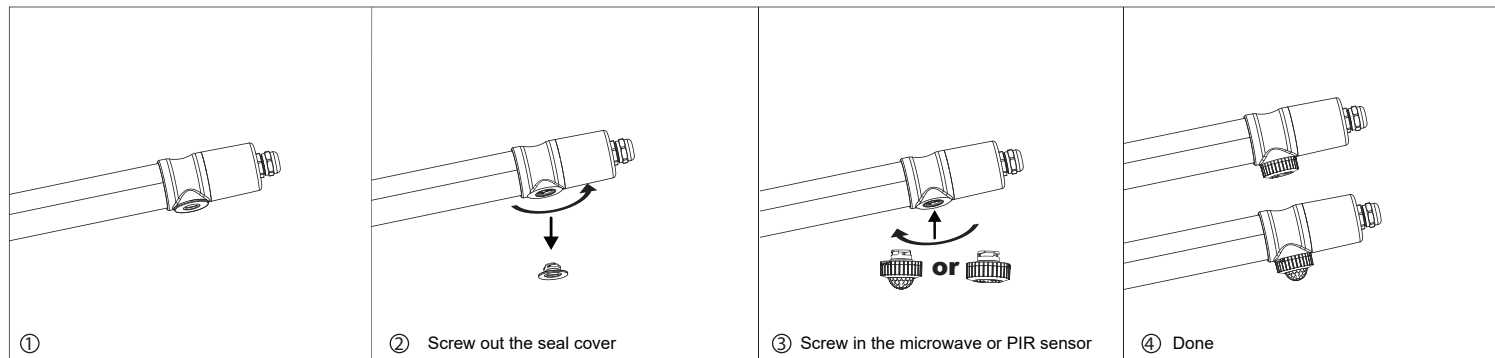


**NOTE:**

A. Pay attention to the arrow pointing.  
B. Screw in microwave or PIR sensor properly.

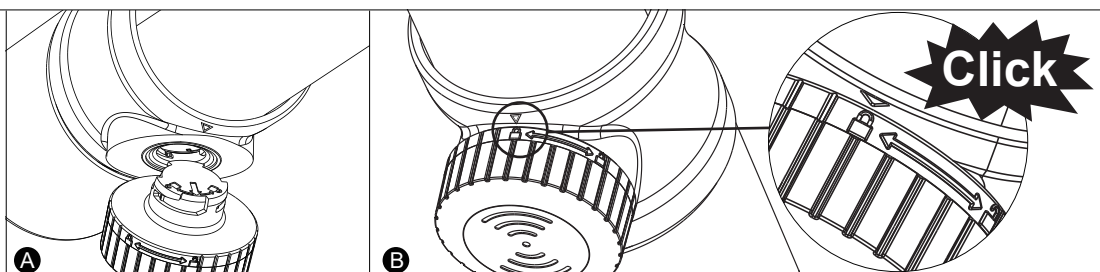

CCT	EET
4000/5000K	B
3000/6500K	C

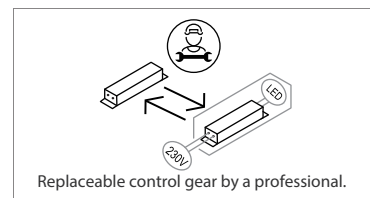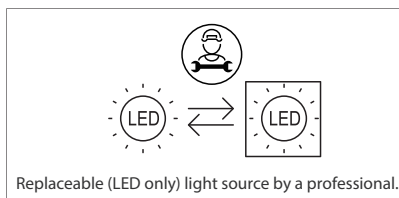

This product contains a light source of energy efficiency class <B>.(4000K/5000K)  
This product contains a light source of energy efficiency class <C>.(3000K/6500K)

**Replace method :**

1. Open the end cover, take out the screws on side B, and take out the module from side A.
2. Remove the cables and plastic clips connecting the PCB board or screws on the power supply.
3. Replace the PCB board or driver with new one.

